

AV SYSTEM INSTRUCTIONS TO PROJECT YOUR LAPTOP PC

(user must provide audio and video cabling)

1


MAKE VGA or HDMI AND AUDIO CONNECTIONS.



2

TAP "DISPLAY POWER"

Projector will turn on. Default input is "Computer."

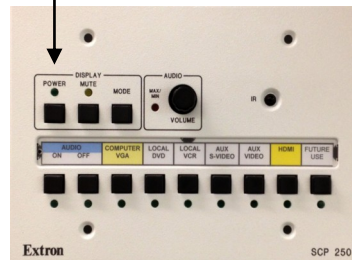

3

IF NO PICTURE: While holding down the "FN" key, tap "F8." You may have to repeat this step.




SOME LAPTOPS REQUIRE A DIFFERENT KEY THAN "F8", LOOK FOR "LCD/CRT" OR ICON SHOWN HERE .



TO PROJECT YOUR DVD

1

TAP "DISPLAY POWER"

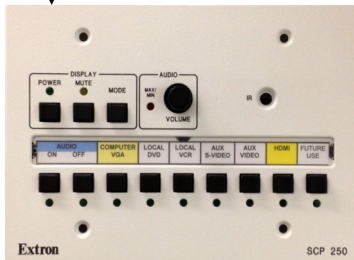

2

Since the default is "Computer"
TAP "DVD", NEXT TO COMPUTER



3

POINT REMOTE CONTROL AT DVD
PLAYER. OPERATE AS USUAL.



NOTE: The audio knob is a CONTINUOUS CONTROLLER. It does not have stops at either end like a conventional volume control.

Turn this knob clockwise to increase the volume, turn counter-clockwise to reduce the volume.

The light will blink rapidly at the top and bottom of its range.